


N06: plot de centrage (la paire)

interchangeables

exemple de commande:
1 pièce N06 Ø12

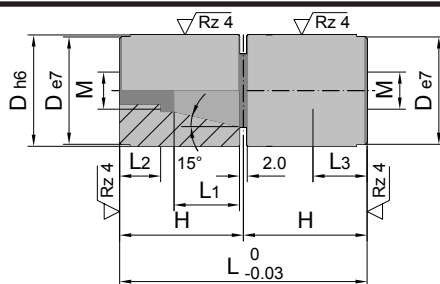

matière: 1.7139 ~ 700HV


L1	L2	M	L3	H	L	D	
4	9	4	10	17	34	12	•
6	9	5	10	17	34	14	•
6	9	5	10	17	34	16	•
9	11	8	16	27	54	20	•
10	11	8	16	27	54	25	•

L1	L2	M	L3	H	L	D	
10	11	8	16	27	54	26	•
14	13	10	20	36	72	30	•
14	13	10	20	36	72	32	•
18	13	10	20	46	92	42	•

N06M: plot de centrage (mâle)

interchangeables

exemple de commande:
1 pièce N06 Ø12 M

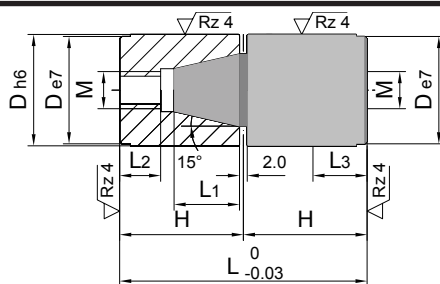

matière: 1.7139 ~ 700HV


L1	L2	M	L3	H	L	D	
4	9	4	10	17	34	12	•
6	9	5	10	17	34	14	•
6	9	5	10	17	34	16	•
9	11	8	16	27	54	20	•
10	11	8	16	27	54	25	•

L1	L2	M	L3	H	L	D	
10	11	8	16	27	54	26	•
14	13	10	20	36	72	30	•
14	13	10	20	36	72	32	•
18	13	10	20	46	92	42	•

N06W: plot de centrage (femelle)

interchangeables

exemple de commande:
1 pièce N06 Ø12 W

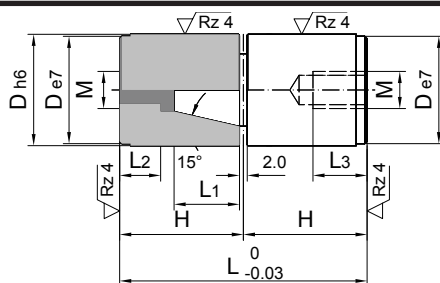

matière: 1.7139 ~ 700HV

L1	L2	M	L3	H	L	D	
4	9	4	10	17	34	12	•
6	9	5	10	17	34	14	•
6	9	5	10	17	34	16	•
9	11	8	16	27	54	20	•
10	11	8	16	27	54	25	•

L1	L2	M	L3	H	L	D	
10	11	8	16	27	54	26	•
14	13	10	20	36	72	30	•
14	13	10	20	36	72	32	•
18	13	10	20	46	92	42	•