


N08: tige de guidage avec siège

exemple de commande:

1 pièce N08 Ø10/40

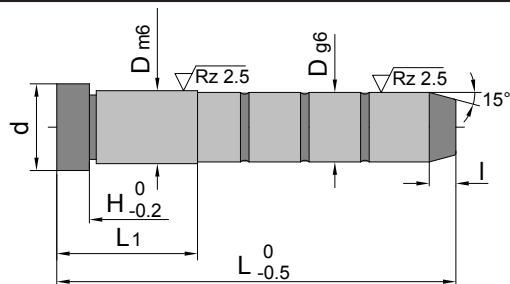

matière: 1.7139 ~ 700HV


d	H	I	L1	D	L	
12	3	5	17	10	40	•
			17		60	•
			22		80	•
			27		100	•
16	6	5	17	12	60	•
			22		80	•
			27		100	•
			27		120	•
18	8	5	17	14	60	•
			22		80	•
			27		100	•
			27		120	•
			36		140	•
			36		160	•
			36		180	•
20	8	5	17	16	60	•
			22		80	•
			27		100	•
			27		120	•
			36		140	•
			36		160	•
			36		180	•
			36		200	•
			46		240	•

d	H	I	L1	D	L	
22	8	7	22	18	80	•
			27		100	•
			27		120	•
			36		140	•
			36		160	•
			46		180	•
			56		200	•
			56		240	•
			56		280	•
24	8	7	22	20	80	•
			27		100	•
			27		120	•
			36		140	•
			36		160	•
			56		180	•
			56		200	•
			56		240	•
			56		280	•

N08: tige de guidage avec siège

exemple de commande:

1 pièce N08 Ø22/100

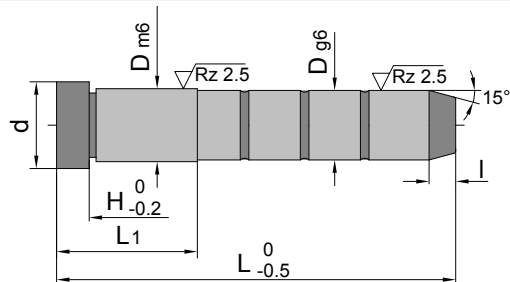

matière: 1.7139 ~ 700HV

d	H	I	L1	D	L	€
26	15	7	27	22	100	•
			27		120	•
			36		140	•
			36		160	•
			46		180	•
			56		200	•
			56		220	•
			56		240	•
			56		280	•
			56		300	•
			56		320	•
			56		360	•
28	15	7	27	24	100	•
			27		120	•
			36		140	•
			36		160	•
			46		180	•
			56		200	•
			56		220	•
			56		240	•
			56		280	•
			56		300	•
			56		320	•
			56		360	•
36	15	7	36	30	160	•
			56		200	•
			56		240	•
			56		280	•
			56		300	•
			56		360	•

d	H	I	L1	D	L	€
36	15	7	36	32	160	•
			56		200	•
			56		240	•
			56		280	•
			56		300	•
			56		360	•
48	15	10	56	40	200	•
			56		240	•
			56		300	•
			76		360	•
			76		400	•
			96		500	•
58	15	15	46	50	200	•
			56		240	•
			56		300	•
			76		360	•
			76		400	•
			96		500	•
68	20	20	56	60	240	•
			56		300	•
			76		360	•
			76		400	•
			96		500	•